

 
C9 Inkless Portable Thermal Photo Printer



Key / interface specification



Long press: Power button
Double click: Print key

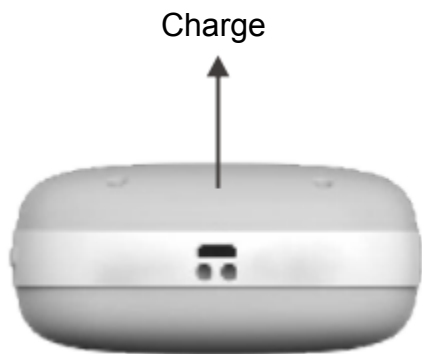


Please charge for the first time and unplug the charger before use



1. First use please charge first, long press the power key 3 seconds to boot.



 
2. Apple store or Google search: Fun print, installed APP to use.

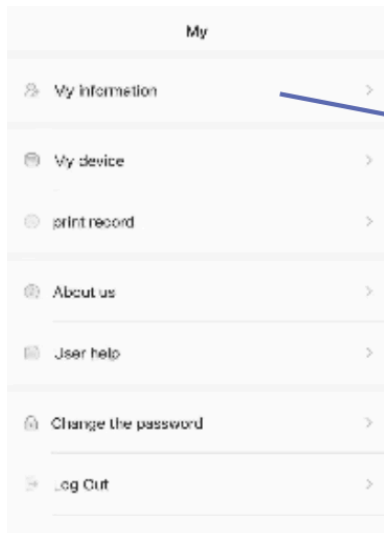


3. After bluetooth is enabled, use the app downloaded from the mobile phone to connect to the Bluetooth printer in the TAB bar of "My Device". After successful connection, the note can be printed.

Paper replacement course

 1. Take out the old paper roll and put the new paper roll in the direction shown. The paper should be put straight and not crooked. (Note: The new thermosensitive paper needs to be exposed to 2 cm of paper bin length so that the machine can absorb paper automatically when the paper bin is shaped)

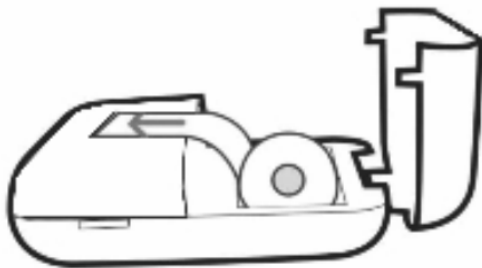

 2. Cover the paper bin, the machine can automatically absorb paper after normal use.

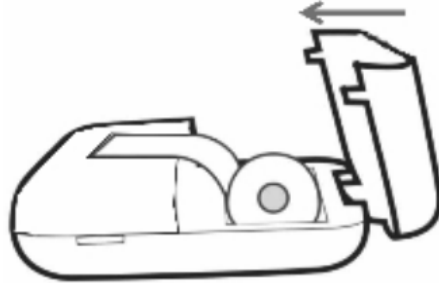

3. After the above steps are correct, the machine can print normally.



Battery Warning Note

1. Please use a 5V charger to charge according to the specification to avoid damage to the machine.
2. Disassembly, impact, extrusion or fire are prohibited.
3. If severe bulging occurs, do not continue to use it.
4. Do not put it in a high temperature environment, battery after immersion is prohibited to use.
5. Replacement with the wrong type of battery can be explosive, be sure to follow the instructions to dispose of used batteries.

Matters needing attention

1. When charging, please gently insert or pull out the charging line to prevent excessive force damage to the port.
2. After charging, please unplug the charging line in time.
3. In order to avoid danger, do not use or charge in high temperature, high humidity, excessive smoke and dust environments, such as: bathroom, steam room, open fire, etc.
4. Improper charging may lead to print head damage.
5. Do not touch the print head to prevent overheating and scalding.
6. Tear paper blade sharp, be careful not to touch.