

Digital Alarm Clock / LCD Electric Clock



Function Introduction

1. Clock function
2. Month/Date viewing function
3. Temperature and humidity display
4. Check the maximum and minimum temperature and humidity values
5. Alarm clock function

Button description

MODE key:

At the conventional mode, press the [MODE] key to switch between clock mode and alarm mode.

Under the clock or alarm mode, hold the [MODE] key for 2 seconds to enter the setting mode.

In the setting state, press the [MODE] key to confirm the setting.

The [UP] button:

Press the [UP] key in clock mode to view the date.

In alarm mode, press [UP] to open/close the alarm.

Press the [UP] key to adjust the setting value.

MAX/MIN button:

Press this key to switch between the maximum temperature and humidity, minimum temperature and humidity, and current temperature and humidity.

Hold down the [MAX/MIN] key for 2 seconds to clear the maximum and minimum temperature and humidity.

The maximum and minimum temperature and humidity is the current temperature and humidity.

°C / °F key:

Switch temperature °C / °F display

Operation instructions

A. Clock mode

Display: The ":" between hour and minute flashes once every second.

If the alarm clock is opened, the corresponding icon will be displayed.

Press the [MODE] key to switch to the alarm mode.

Hold down the [MODE] key for 2 seconds to enter the clock setting mode, press [UP] key to adjust the setting value, and press [MODE] key to confirm.

Setting order: Minute→hour→12/24hr→year→month→day→Exit.

Seconds return to zero when adjusting minutes.

In clock mode, press [UP] to view the date. After 3 seconds, the system automatically returns to clock mode.

B. Alarm clock mode

Display: the ":" between hour and minute displays but does not blink.

Press the [MODE] key to switch to the clock mode.

Hold down the [MODE] key to set the alarm minutes, press [UP] to adjust the minutes, press [MODE] to set the alarm hours, press [UP] to adjust the hours, and press [MODE] to confirm the setting.

When the alarm time is adjusted, the alarm flag is automatically turned on.

In alarm mode, press the UP key to open/close the alarm function and hourly chime function, in order of: Alarm → Hourly chime → Alarm and Hourly chime open together → Alarm and Hourly chime close together.

Press any key to exit the alarm when the alarm goes off. If there is no key operation, the alarm will go off after one minute.

If you do not press the button in alarm mode for 1 minute, the clock mode is automatically returned.

C. Temperature and humidity function

Temperature range: -10~50°C

Temperature accuracy: ± 1.5°C

Humidity range: 10% to 99%

Humidity accuracy: ±8%