 
 
 


Maxgroom ZC-F608 Hair Clipper and Trimmer Set

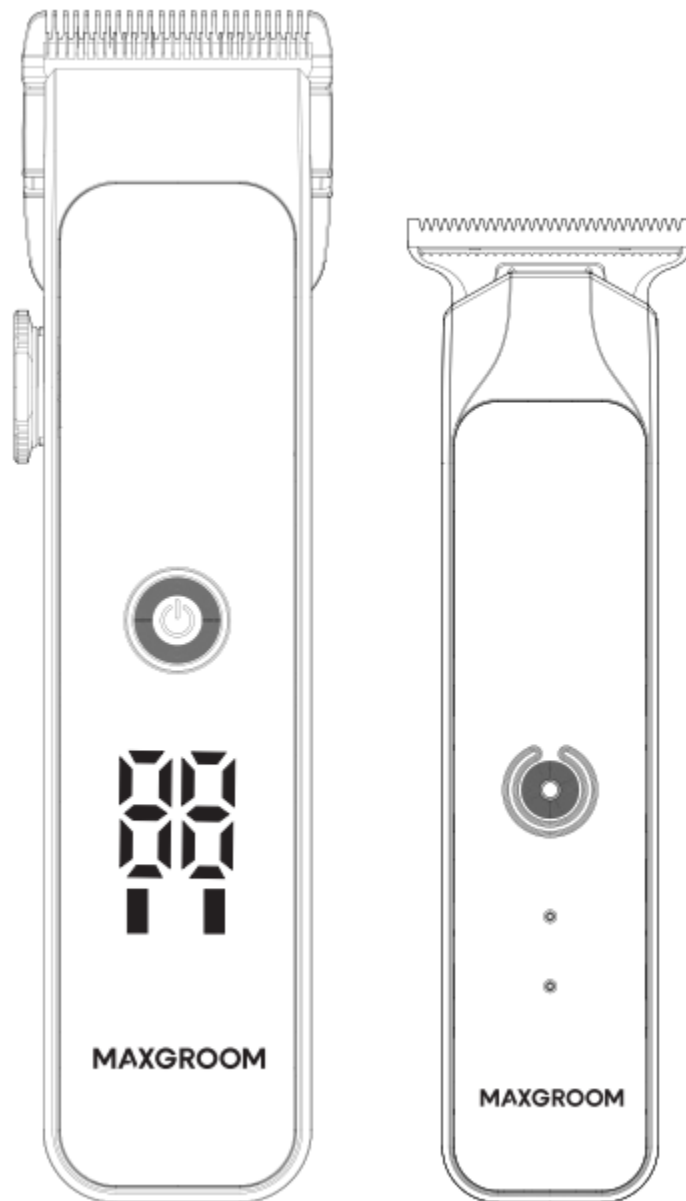

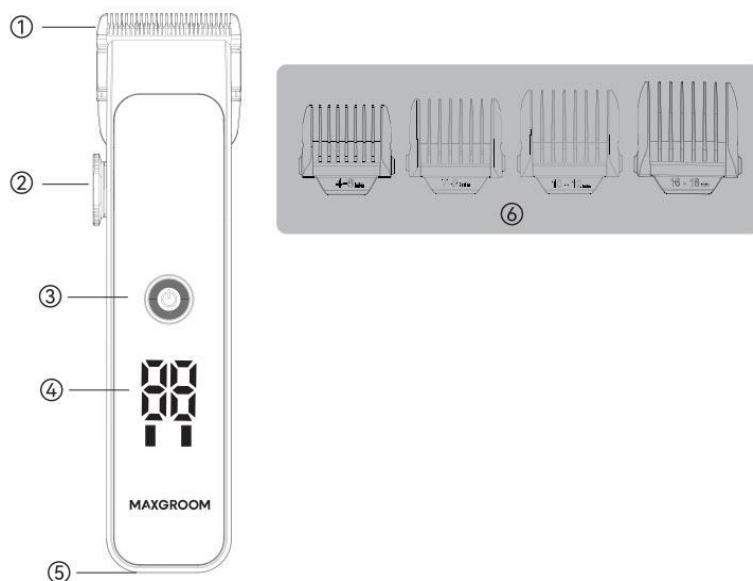

1. Ceramic titanium blade head
2. Blade gap adjustment knob (0.9-2.1mm)
3. On/Off switch
4. Battery indicator
5. Charging port
6. Limited comb

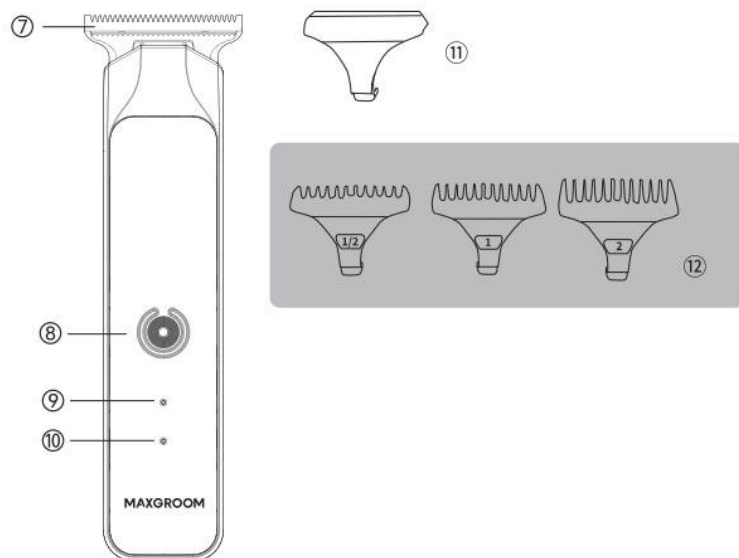

7. Stainless steel blade
8. On/Off switch
9. Green indicator light
10. Red indicator light
11. Protective comb
12. Limiting comb

Instructions

ZC-F508

1. Power On/Off

Press the power button to start the product in high gear. Press the power button again to switch to low gear. Press the power button again to turn the product off.

2. Charging

Plug the charging cable into the charging port and plug in a power source to start charging. Charging is complete when the battery level displays "99."

ZC-F608

1. Power On/Off


Press the power button to start the product. Press the power button again to turn it off.

2. Charging


Plug the charging cable into the charging port and plug in a power source. The red light will flash to start charging. When the charging indicator lights up solid green, charging is complete.

3. Installing/Removing the Limiting Comb Cover

Installation: First put the comb cover on the teeth, press the buckle at the end of the comb until you hear a "click" sound.

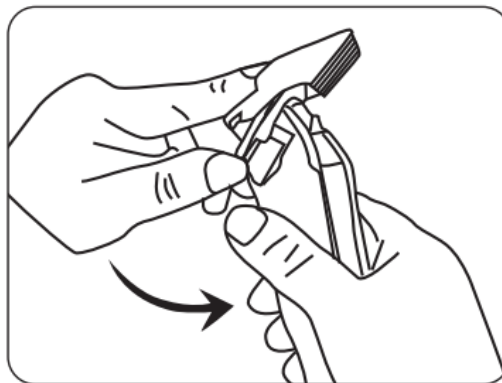

Disassembly: As shown in the picture, push the buckle from the end of the comb to easily remove the protective comb.

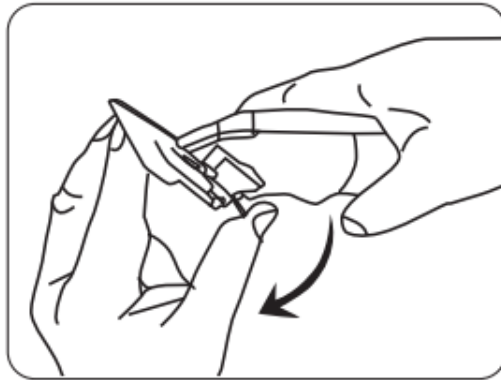

Battery disposal instructions

This product contains a lithium-ion battery, a valuable recycable resource. When disposing of the product, remove the battery and deposit it in recycling bins or designated collection points.