 
 


User manual for Samsung Galaxy Buds Live SM-R180

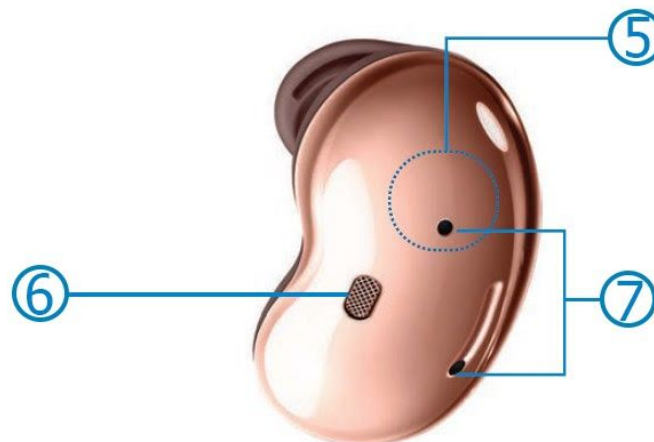

Specifications

- Chipset: BCM 43015
- Bluetooth: 5.0
- BT Profile: HFP, A2DP, AVRCP
- Playtime: up to 6h
- Talk time (ANC on): up to 4.5h
- Quick charging: 60 minutes of play / 5 minutes charging
- OS requirements: Android 5.0 or higher, iPhone 7 or later, running iOS 10 or higher
- Earbud dimensions: 16.5mm x 27.3mm x 14.9mm
- Earbud weight: 5.6g
- Charging case dimensions: 50mm x 50.2mm x 27.8mm
- Charging case weight: 42.2g

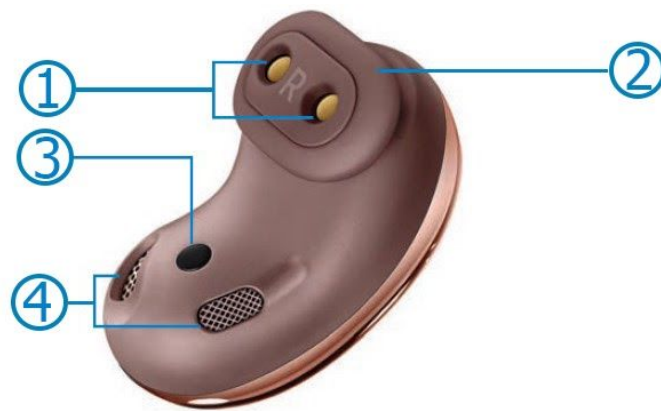

1. Charging contacts
2. Wingtip
3. Touch-sensitive sensor
4. Speakers

5. Touch area
6. Speaker
7. Microphones

Set up your device

Learn more about your device hardware, assembling and charging, and how to get started using your new device.

Your device case is also the charger. To charge your earphones follow the next steps.

1. Place the earbuds into the charging case. For best results, do not insert earbuds in the charging case if they are wet or dirty.
2. Close the charging case, and either connect the USB cable or place the charging case on a wireless charger. The earbuds and charging case are charged simultaneously.

When you connect the earbuds and the charger case the LED indicators flash certain colors to indicate the battery level.




- Green: Fully charged or above 60% battery.
- Yellow: Between 30 and 60% battery.
- Red: Charging or below 30% battery.
- Flashing Red: Charging error. Reconnect the case and earbuds. If the error occurs again, contact a Samsung Service Center for service support.

Before wearing the earbuds, be sure to attach the wingtips. Wearing earbuds without wingtips may hurt your ears.

1. Select the wingtip size that best fits your ear.
2. Hold the wingtip for the left or right ear in one hand, and the corresponding earbud in the other.
3. Hook the wingtip's groove to the earbud's fixation hook on one side and gently pull the wingtip to cover the earbud. Do not pull the wingtip excessively when you attach or detach it because it may tear.
4. Follow the same procedure for the other earbud.

Place the earbuds in your ears correctly for a comfortable fit.

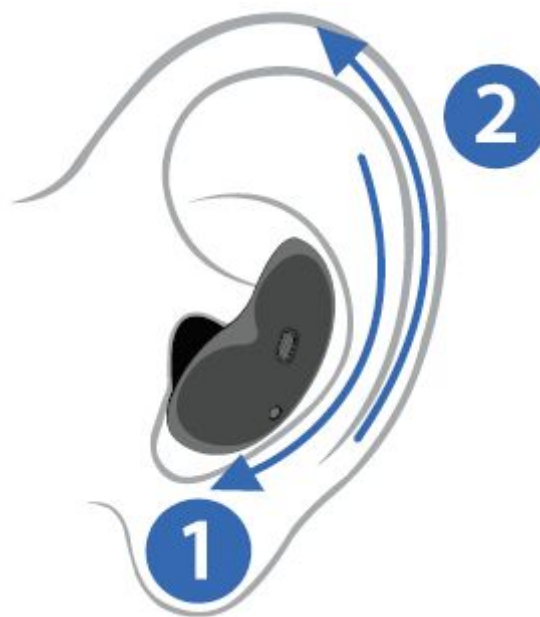

1. Select the right or left earbud, and insert the lower half (with the speakers) into the bottom part of the corresponding ear.
2. Tuck the top half of the earbud (with the wingtip) in the upper part of your ear. Adjust for a comfortable fit. The touch-sensitive sensor will detect that you are wearing the earbuds when you put them on and emit a sound.

Should you lose one of the earbuds, you can buy a replacement and couple the old and new earbuds together.

1. Insert the earbuds into the charging case. The earbud battery indicator light will flash red to indicate that the earbuds are not coupled.
2. Tap and hold the touch area on both earbuds for seven seconds or more. When the earbud battery indicator light flashes green and then turns off, the earbuds are coupled and ready for use.

Start using your earphones

First of all, you have to connect the earbuds to your device. To do so, install the Galaxy Wearable app on the smartphone. You can download the app from the Galaxy Store or the Google Play store.

Galaxy Wearable is compatible with select devices using Android 5.0 and later with at least 1.5GB RAM. Supported devices may vary by carrier and device. Some features may not be available. For best results, connect with compatible Samsung Galaxy devices.

1. Open the charging case to enter the Bluetooth pairing mode.
 - You can also enter Bluetooth pairing mode while wearing the earbuds by pressing and holding the left and right touch areas on the earbuds at the same time.
2. From the Apps screen of the smartphone, tap Galaxy Wearable. If necessary, update the app to the latest version.
3. Tap **Get started** and select your device.
4. Follow the prompts to complete the connection.

Use touch controls

Use the touch area on the earbuds to control your music, phone calls, and other useful shortcuts without getting out your phone.

- Single tap: Lightly tap the touchpad one time to Play/Pause a track.
- Double-tap: Quickly tap the touchpad two times to Play the Next track/Answer or end a call/Place the current call on hold and answer a second incoming call/Switch between a current call and a call placed on hold.
- Triple tap: Quickly tap the touchpad three times to play the previous track/Start the current track over at the beginning.
- Touch and hold: Touch and hold the touchpad to Activate a custom shortcut/Decline a call/Turn the microphone on or off during a call/Retrieve a call placed on hold after ending the current call.