User Manual for Baseus Encok W04 TWS Bluetooth Earphones



Specifications

Bluetooth version: v5.0Wireless range: up to 10mFrequency range: 20Hz-20kHz

Speaker units: 2 x 13mmImpedance: 32 OhmsMusic time: up to 6h

- Charging time: 1,5h (earphones); 3h (box)

Charging box capacity: 400mAh

- Earphones battery capacity: 37mAh each

- Water-resistant level: IP54

Pairing

For the first time pairing, please keep the earphones within 1m from your mobile phone.

Open the cover of the charging case and the left and right earbuds will pair with each other automatically. After that, they will enter the wireless pairing mode. Turn on the wireless function on your phone, search for earbuds and click for connection. Enter the pairing password "0000" (some phones require a password for pairing and some don't). If the pairing fails, please repeat all steps again. The indicator will turn off after the successful pairing.

Functions

For dual earphones use, open the cover of the charging case or press the touch area of the left and right earphones for 3 seconds to power them on. To power them off, simply put them back to the charging case or hold the left and right earphones for 3 seconds.

For single earphone use, open the cover of the charging case, and remove one of the earbuds, and the earphones will enter the single earphone mode. Double touch the earphone to Play/Pause music or Answer/End the phone call. Long-press the earbud for 3 seconds to reject the call. To turn it off, put the earbud back to the charging case.

While in the music mode, the functions are following:

- Last/Previous song: 3 clicks on the left earbud
- Next song: 3 clicks on the right earbud
- Play/Pause: double click the right earbud
- Voice assistant: double click the left earbud
 While in the call mode, the functions are following:
- Answer/End a call: double click the left or right earbud
- Reject a call: long-press the left or right earbud

When the earbuds are placed in the charging case and start charging the far left and far right LED will light up. While charging the charging case all LEDs will light up. The LEDs also indicate how much the battery life is left:

- One LED: 25%

Two LEDs: 25% - 50%Three LEDs: 50% - 75%Four LEDs: 75% - 100%

To restore the factory settings, turn off the wireless functions of the surrounding mobile phones, take out the earbuds from the charging case, and tap 3 times the touch area on them while the white light flashes. Wait for 3 seconds before you put them back to the charging case and that's it.