User manual for 2-in-1 Maze Ball Puzzle Hand Warmer Power Bank W01








Specification:

- Model: W01
- Battery capacity: 10000mAh
- Input: USB Type-C
- Duration of Heat: 8h-14h
- Output: USB A
- Heating temperature: 45C/55C
- Charging power: 10W
- Heating power: 5W
- Material: ABS + PC + aluminum alloy

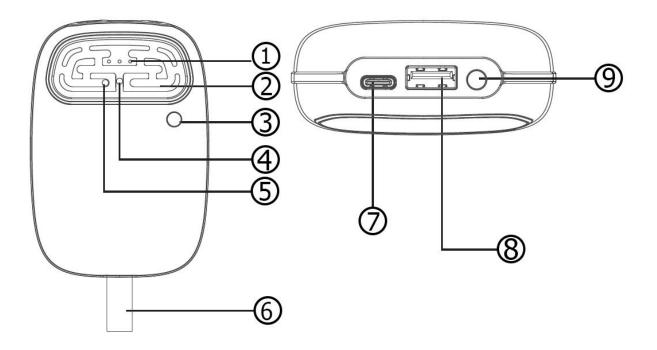

- 1. Power indicator
- 2. Maze game
- 3. Switch button
- 4. Clearance slot
- 5. Balance beads

- 6. Lanyard
- 7. Type-C interface
- 8. USB interface
- 9. Flashlight

Instructions

Maze game

When the balance ball reaches or passes through the clearance slot, the game will be cleared. At this time, colored light will light up around the maze for 5 seconds.

Hand-warming function

Long-press the switch button for 3 seconds to enter the hand warmer level 1 (45 degrees). Click the switch button to change to the second the warmer level (55 degrees) and if you click it again, you'll go back to the warmer level 1 (loop). Level 1 can last up to 8 hours and level 2 up to 6 hours. Long-press the power button for 3 seconds to turn off the hand-warming function.

Power bank

Insert the cable into the USB interface to charge your mobile device. When the hand-warming function is turned on, the charging function is not available.

Flashlight mode

Double click the switch button to turn on the flashlight on the gadget. Double press it again to turn the flashlight off.

Power indicator

The power indicator lights up when the hand warmer and power bank are turned on. It will turn off when the hand warmer and power bank functions are off. Tap the switch button once to turn on the power indicator and check the battery level.