


User Manual for Samsung Galaxy Buds Pro SM-R190



Specifications

- Bluetooth: 5.0
- BT Profile: A2DP, AVRCP, HFP
- Playtime (ANC and Bixby Voice assistant ON): 5 - 18h w/Case
- Playtime (ANC and Bixby Voice assistant OFF): 8 - 28h w/Case
- 3 microphones: 2 outer and one inner
- Quick charging: 5 minutes charging / 1 hour of play
- Speaker: 2-way 11mm woofer, 6.5mm tweeter
- OS requirements: Android 7.0 or higher, 1.5GB or higher
- Earbud battery capacity: 61mAh
- Charging case battery capacity: 472mAh
- Water-resistant rating: IPX7
- Earbud dimensions: 2,05 x 1,95 x 2,08 cm
- Charging case dimensions: 5,00 x 5,02 x 2,76 cm

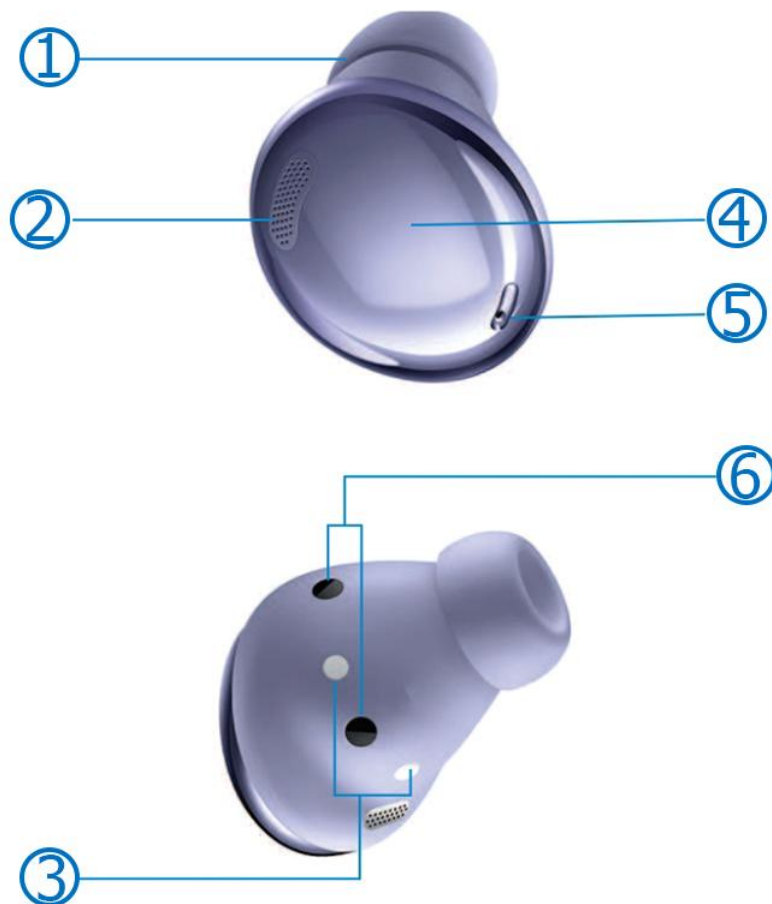

1. Ear tip
2. Microphone
3. Charging contacts

4. Touchpad
5. Microphone
6. Touch-sensitive sensors

Charging the battery

Your device case is also the charger. To charge the earbuds, please follow the instructions below.

1. Place the earbuds into the charging case. For best results, do not insert earbuds in the charging case if they are wet or dirty.
2. Close the charging case, and either connect the USB cable or place the charging case on a wireless charger. The earbuds and charging case are charged simultaneously.

When you connect the earbuds and the charger case the LED indicators flash certain colors to indicate the battery level.


- Green: Fully charged or above 60% battery.
- Yellow: Between 30 and 60% battery.
- Red: Charging or below 30% battery.
- Flashing Red: Charging error. Reconnect the case and earbuds. If the error occurs again, contact a Samsung Service Center for service support



1. Earbud battery indicator
2. Charging case battery indicator

Attach and wear the earbuds

Before wearing the earbuds, be sure to attach the ear tips. Wearing earbuds without ear tips may hurt your ears.

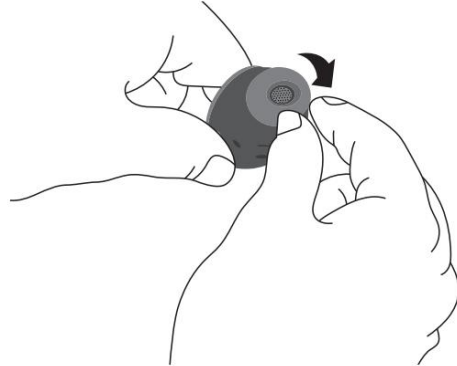

1. Select the ear tip size that best fits your ear.
2. Hook the ear tip's groove to the earbud's fixation hook on one side and gently pull the ear tip to cover the earbud. Do not pull the ear tip excessively when you attach or detach it because it may tear.
3. Follow the same procedure for the other earbud.

Place the earbuds in your ears correctly for a comfortable fit



1. Insert the earbuds into your ears with the ear tips facing the bottom of your ears.

2. Adjust the earbuds by rotating them to the left or right to fit your ears comfortably. The touch-sensitive sensor will detect that you are wearing the earbuds and emit a sound.

Connect the earbuds with your phone

To connect your earbuds to a smartphone, install the Galaxy Wearable app on the smartphone. You can download the app from the Galaxy Store or the Google Play store.

Galaxy Wearable is compatible with select devices using Android 7.0 and later with at least 1.5 GB RAM. Supported devices may vary by carrier and device. Some features may not be available. For best results, connect with compatible Samsung Galaxy devices.

1. Open the charging case to enter Bluetooth pairing mode.
 - You can also enter Bluetooth pairing mode while wearing the earbuds by pressing and holding the left and right touch areas on the earbuds at the same time.
2. From the Apps screen of the smartphone, tap Galaxy Wearable. If necessary, update the app to the latest version.
3. Tap Get started and select your device.
4. Follow the prompts to complete the connection.

Use touch controls

Use the touch area on the earbuds to control your music, phone calls, and other useful shortcuts without getting out your phone.

Single tap: Lightly tap the touchpad one time for the following options:

- Play a track
- Pause a track

Double-tap: Quickly tap the touchpad two times for the following options:

- Play the next track
- Answer or end a call
- Place the current call on hold and answer a second incoming call
- Switch between a current call and a call placed on hold

Triple tap: Quickly tap the touchpad three times for the following options:

- Play previous track
- Start the current track over at the beginning

Touch and hold: Touch and hold the touchpad for the following options:

- Activate a custom shortcut. See Customize touch controls for more information
- Decline a call
- Turn the microphone on or off during a call
- Retrieve a call placed on hold after ending the current call