



User Manual for Cartoon HD Digital Camera for Kids with 3 Games

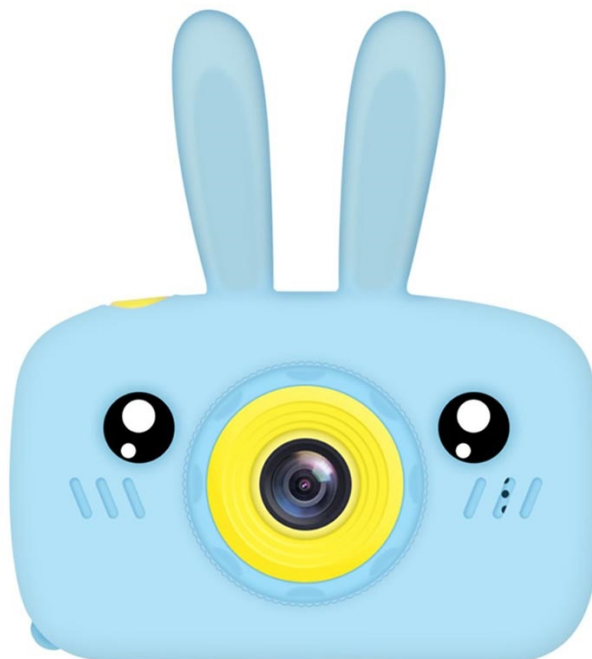

Specifications

- Screen: HD 2"
- Video resolution: 1280x720p
- Image resolution: 12MP
- MicroUSB port: up to 32GB card
- Battery capacity: 1200mAh
- Charging time: about 2h
- Pre-installed games: Snake, Sokoban, Tetris
- Supported languages: English, Russian, Chinese, Korean, Japanese, etc.
- Dimensions: 8cm x 5cm x 4cm

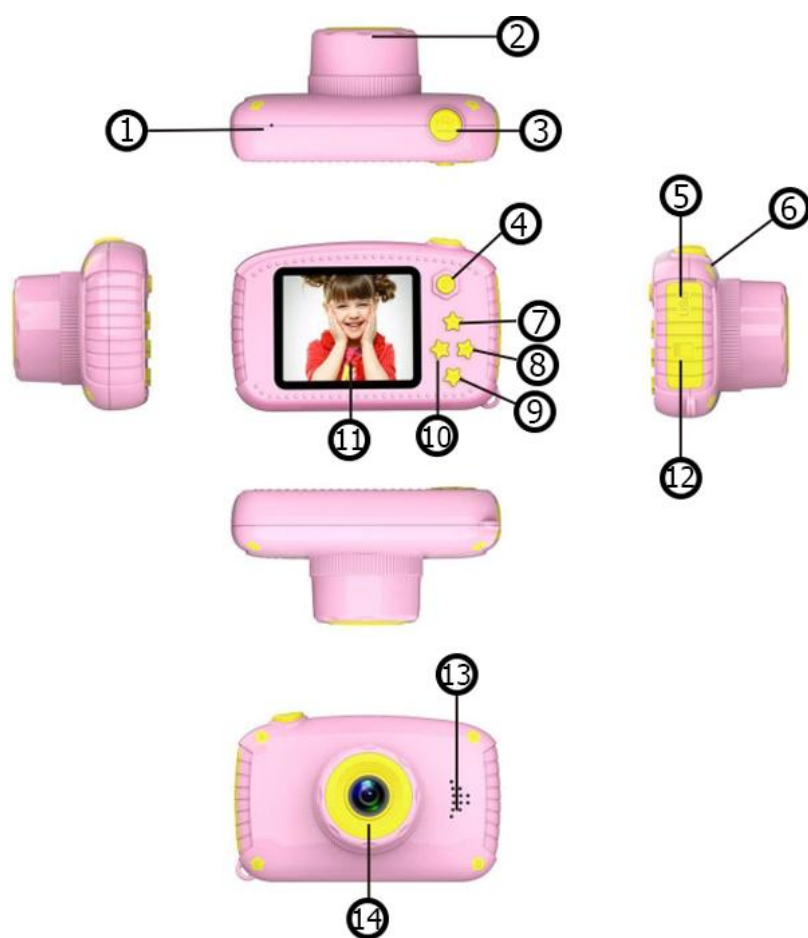

- | | |
|-----------------------|------------------|
| 1. Microphone | 8. Down button |
| 2. Lens | 9. Menu button |
| 3. Video/Photo button | 10. Up button |
| 4. Power button | 11. Display |
| 5. USB port | 12. SD card slot |
| 6. Reset button | 13. Speaker |
| 7. Mode button | 14. Lens |

Basic operations

Power On/Off: Press and hold the power button to turn the camera on. The blue indicator will light up indicating the power status. To turn it off, press the power button again and the blue indicator will go off.

Video mode: Short press the Mode button to switch to the video mode. The camera resolution and the camera icon will be displayed in the upper right corner of the screen. Short press the Video/Photo button to start recording and the recording indicator will start flashing indicating that the camera is recording.

Photo mode: Short press the Mode button to switch to the photo mode and the camera resolution and icon will be displayed in the upper right corner. Short press the Video/Photo button to take a picture. When the picture is taken, the indicator will flash once indicating that the picture is completed.

Video/Photo playback: Short press the Mode button to switch to the playback mode. The playback icon will be displayed in the upper right corner. Use the Up and Down buttons to select the photos or videos you want to see.

Menu settings: Short press the Menu button to open the menu settings. Use the Up and Down buttons to cycle through options. Select the setting option that needs to be changed and confirm by short pressing the Video/Photo button. To exit the Menu settings short press the Menu button.

USB mode: Use the USB cable to connect the camera to the computer. In this mode video and photo files can be accessed.

Battery instructions

There are three ways to charge the battery. The blue indicator will light up indicating that the charging is in progress.

1. Charging with the wall charger
2. Charging with USB cable via computer
3. Charging with the car charger