

User Manual for Lansenxi LF606 Foldable WiFi FPV Drone with 4K HD Camera



Specifications


- Model: LF606
- Material: ABS
- Remote controller: 2.4GHz WiFi, smartphone
- Control distance: about 50-80m
- Camera: 4K HD (wide-angle), fixed lens 45-degree
- Motor: 716 brushed
- Drone battery: 500mAh 3.7V
- Flight time: around 7 minutes
- Remote controller battery: 3x AAA 1.5V batteries (not included)
- Charging time: about 120 min
- Drone size(folded): 55mm x 35mm x 75mm
- Drone size(unfolded): 110mm x 110mm x 35mm

The app and features

First of all, you need to download and install the WiFi_CAM App. To do so, search the app on the Google Play Store for Android or App Store for iOS devices, or scan the QR code below and select App Store, Google Play Store, or direct download.



When you download and install the app, power on the drone, and wait until you see the LED start to flash. This means that the drone is waiting for the connection with your device. On your phone open Settings, go to WiFi, and find a network on the list that is named "WiFi_FPV_XXX". Connect to that network, open the WiFi_CAM app and click "Start". The picture below shows the controls that you can use in the app.

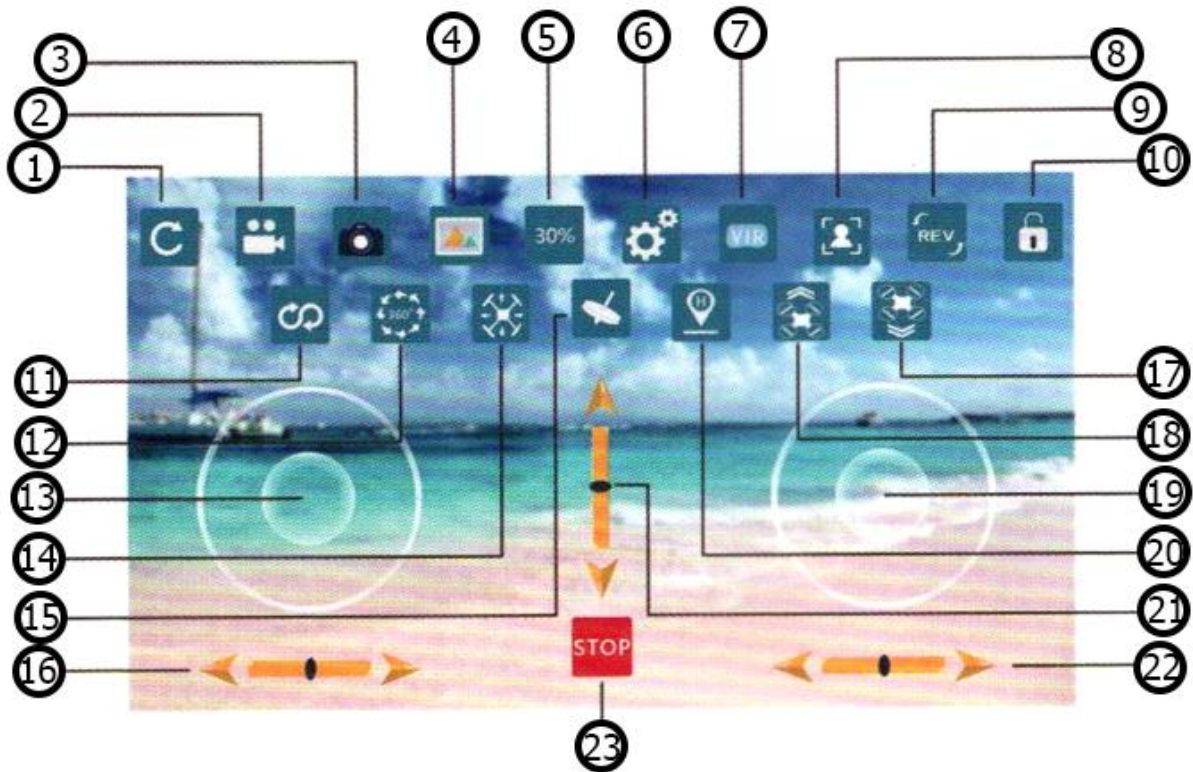

- | | |
|--------------------------|--------------------------|
| 1. Back | 13. Left throttle |
| 2. Video | 14. Headless control |
| 3. Photo | 15. Motion control |
| 4. Media | 16. Rotate trim |
| 5. Speed | 17. One-key landing |
| 6. Calibration | 18. One-key take off |
| 7. VR First Person View | 19. Right throttle |
| 8. Automatic photography | 20. Auto-hover |
| 9. Display reverse | 21. Forward/Reverse trim |
| 10. Fullscreen | 22. Left/Right trim |
| 11. Flightpath | 23. Emergency stop |
| 12. Acrobat | |