User Manual for Children's Walkie-Talkie with Rechargeable Battery



Specifications

Number of main channels: 22Number of sub-channels: 99

Range: up to 5kmMaterial: Eco ABS

Basic operations

- 1. Press the Power button for 3-4s to turn on the walkie-talkie
- 2. Press the Menu button once to enter the channel settings, and the channel display pattern will start flickering. Use the arrow buttons to select the channel and press the Push-to-Talk button (PTT) to confirm and exit.
- 3. Press the Menu button twice to select the group code. If you just close it means no code is selected, 01-38 means CTCSS code, 39-99 means DCS code.
- 4. Press the Menu button 3 times to enter the VOX (Voice-activated transmission) function. You can choose the sensitivity between OF, 1, 2, and 3, and the default "OF" is off.
- 5. Press the Menu button 4 times to enter the calling tone selection. There are 10 sound choices.
- 6. Press the Menu button 5 times to enter the button tone selection. You can choose whether you want to hear the tone or you won't.
- 7. Press the Menu button 6 times to enter the PTT button tone selection. You can choose whether you want to hear the tone when you press the button or you won't.
- 8. Press the Menu button 7 times to return to the main page or press the PTT button to confirm and return to the main page.
- 9. To adjust the volume, press the up or down buttons. Up to increase the volume, down to decrease. The volume level is displayed on the screen with 1-8 levels.
- 10. To avoid additional change to your walkie-talkie, press the lock button for 3 seconds and after the beep, it will lock all buttons except the lock button and PTT button. To unlock, hold the lock button until you hear a beep sound.

Scan the active channels

You can use the walkie-talkie to scan the active channels. When a signal is detected, the radio will stay on that channel for 5 seconds and then will continue to scan.

To turn on channel scanning press the Lamp button for 3-4 seconds. To turn it off, press the PTT/Menu/Mon button. During the scanning process, press any of the arrow buttons to change the scanning direction.