 


# User Manual for Digital Smart Wireless Doorbell with 38 Songs



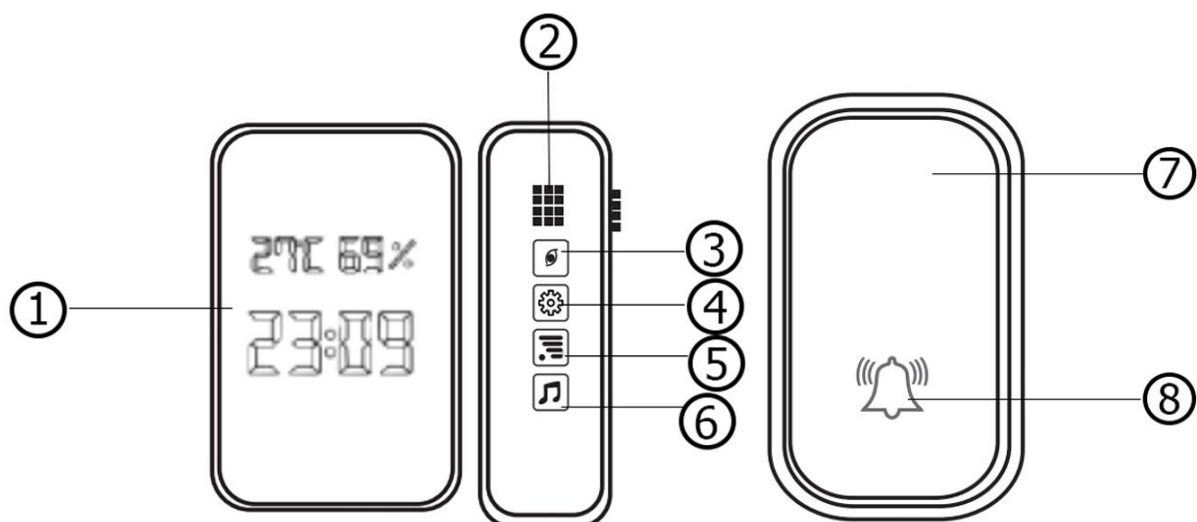

- |                                      |                           |
|--------------------------------------|---------------------------|
| 1. Digital display                   | 5. Volume button          |
| 2. Humidity probe/Measurement window | 6. Music selection button |
| 3. Temperature switch button         | 7. Invisible LED light    |
| 4. Time setting button               | 8. Doorbell touch button  |

### Specifications

- Volume: 0-100dB, 4 levels adjustable
- Water resistant rating: IP44
- Working humidity: 0-99%
- Working temperature: 0-99 degrees
- Receiver voltage: 100- 260V / 50- 60Hz
- Working frequency: 433.92MHz + 75KHz

### Installation methods

Plug the AC receiver into a standard outlet in the room, and it'll work. You can choose the melody you want it to ring.

 
Before installing the transmitter, test if it works in the operating range you choose. If it works, use the double-sided adhesive sticker and fix the transmitter cover on the wall.

### Setting the time

To set the time, press and hold the settings button for 3 seconds to enter the time adjusting mode. The first two digits will start flashing. Press the settings button, and the number will increase by 1. When you set hours, press the set button and adjust the minutes one digit. When you're done, wait for 6 seconds, and it will automatically save and exit the settings mode.

## Setting the temperature

All relevant parameters are automatically set up. The real-time field temperature can be induced only by plugging in. The temperature can be set to display Celsius and Fahrenheit by pressing a settings button.

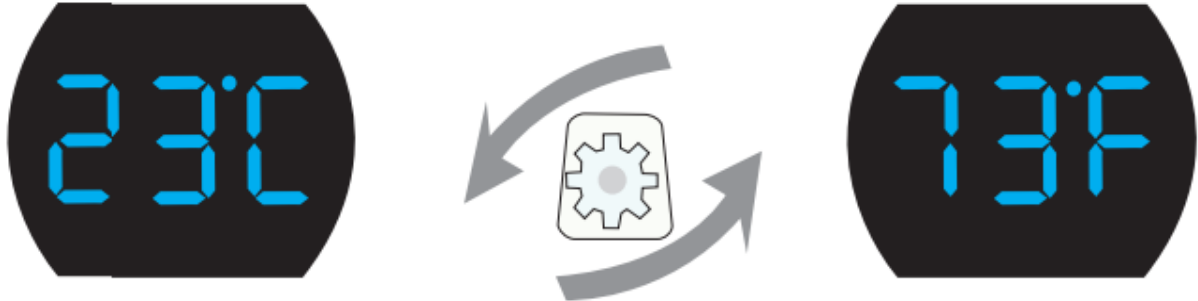

## Add or update the transmitter method

The manufacturer already paired the receiver and transmitter, but if they are added or replaced, you can pair them yourself by following the steps below.

- a) Press and hold the volume button for 3-4 seconds.
- b) At the same time, keep the transmitter close to the receiver and hold its button for 3-4 seconds.
- c) Press the transmitter button, and if the receiver rings, the pairing is successful. If it doesn't ring, repeat the steps.

To clear all transmitters power on the receiver, press and hold the volume button. The music change indicates that all transmitters are removed successfully. To verify, press the button on the transmitter, and if the receiver doesn't ring, it's successfully unpaired. If it rings, repeat the steps.

The receiver can be paired with up to 10 transmitters. When paired, the first transmitter is number 1 by default, the next one is number 2, then number 3, etc. After all the pairing is complete, the receiver will display its number when one of the transmitters is pressed.