


# Digital Instant Camera for Kids with 32GB Memory Card



## Specifications:

- Display: 3.5"
- Sensor: 12 Megapixels
- Video resolution: 1080p, 720p
- Photo size: 57mm
- Zoom in: 5x
- Battery: 1500mAh
- Charging time: 2h
- Charging port: MicroUSB
- Memory card: 32GB

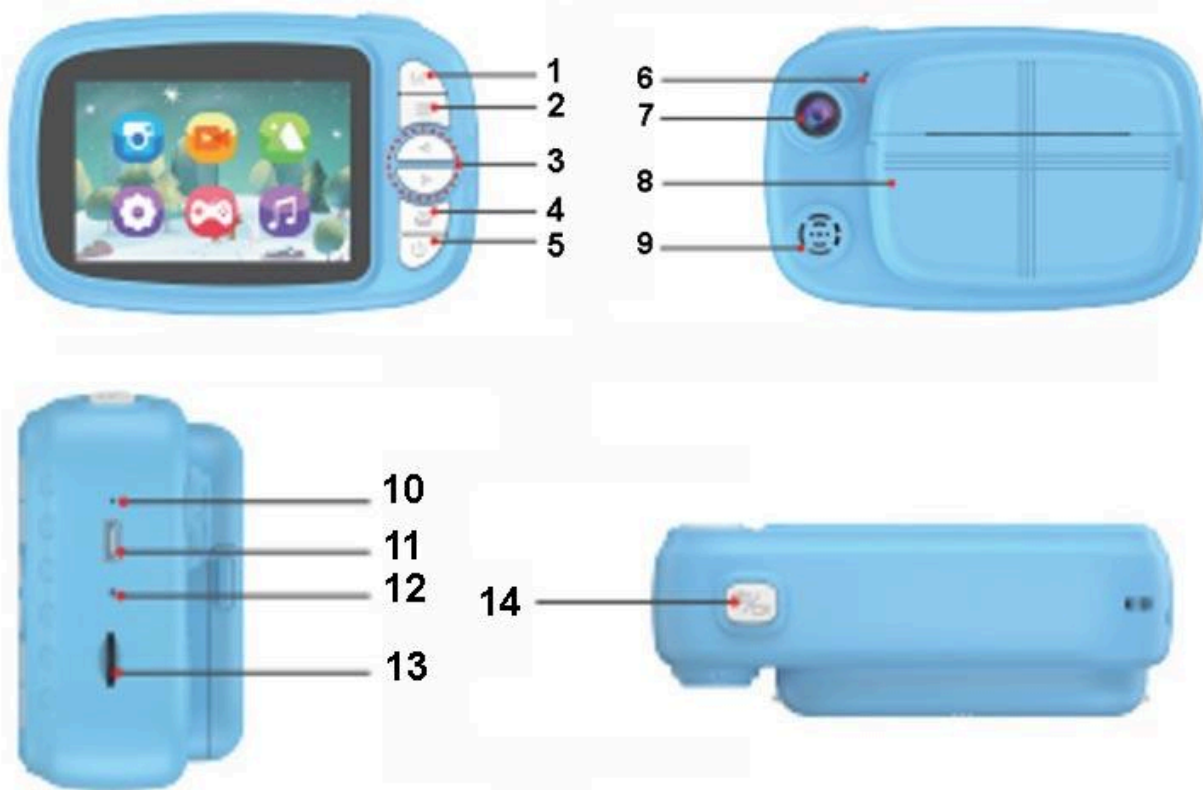

1. M/Timing/Left button
2. Switch/Delete/Right button
3. Up/Down button
4. Print button
5. Power button

8. Camera paper rolls
9. Speaker
10. Light
11. USB port
12. Reset
13. TF card slot
14. Confirm/Shutter button

## **Functions:**

1. Confirm/Shutter Button: Press to release the shutter and capture a photo or video. In playback mode, press to confirm the selection. In print mode, press to initiate instant shooting and printing.
2. M/Timing/Left Button: In the game interface, short-press this key to the left. Press this button to enable the timing function in shooting state.
3. Switch/Delete/Right Button: In the game interface, short-press this key to the right. When viewing the album, press it to delete a photo/video.
4. Up/Down Button: In the menu, press it for left/right selection. In other interfaces, press it for up/down selection.
5. Print Button: By default, it is open during startup in photo mode; there is paper that can be printed immediately.
6. Power Button: Long-press to switch the camera on/off. Press it in any mode to return to the menu interface.
7. TF Card Slot: Supports a 32GB memory card; without a card, the video shooting function is not supported.
8. USB Port: Connect the cable for charging or data transfer.
9. Reset: Insert the card needle and press and hold for 3 seconds to reset and shut down the camera.