

User Manual for Animal Shape Kids 20MP Digital Camera X5



Specification

- Model: X5
- Video resolution: 1080 x 720
- Photo resolution: 20MP
- Battery capacity: 400mAh
- 2.0 inch LCD display (720 x 320)
- Working time: up to 6 hours
- Charging time: about 2-3 hours
- Memory card support: up to 32GB(not included)
- Charging current and voltage: 5V/1A
- Product weight: 185g



1. USB port
2. Up button
3. SD card slot
4. Speaker
5. Indicator light
6. Lens

7. Power button
8. Camera shutter button
9. Display
10. Down button
11. Mode button
12. Menu button

Description of the buttons and ports

USB port: It's used to connect the camera to the PC to transmit photos and videos, or to connect the external power supply to charge the battery of the camera.

Mode button: This button allows you to switch between recording mode, camera mode, video playback, and photo browsing mode.

SD card slot: It allows you to put your SD card into the camera.

Speaker: Plays the sound of a video you captured.

Microphone: Records the sound while you're recording a video.

Power button: Turning the camera On/Off and serves as an indicator while the camera is charging.

Camera shutter button: The camera takes a photo if it's in the photo mode, or starts recording if it's in a recording mode. If you open the menu, it serves as a confirmation button.

Menu button: Short press it to open the settings menu. Press it again to exit the menu.

Up and Down buttons: Use these buttons to go through the menu.

Basic operations

Power On/Off: Press and hold the Power button to turn the camera On. The blue indicator will light up to indicate that the camera is on. To turn it Off, press the power button again and the blue indicator will go off, too.

Recording mode: Short press the Mode button to switch to the recording mode and the camera resolution and icon will appear in the top right corner. To start recording, short press the Camera shutter button, and the recording indicator will start flashing.

Photo mode: Short press the Mode button to switch to the photo mode and the camera resolution and icon will appear in the top right corner. To take a picture, short press the Camera shutter button, and the indicator will flash once indicating that the picture is taken.

Video/Photo playback: Short press the Mode button to switch to the playback mode, and the playback icon will appear in the top right corner. Use the Up and Down buttons to choose the file you want to preview.

Menu settings: Short press the Menu button to enter the menu settings. Use the Up and Down buttons to cycle through the menu. To select the setting that you want to change press the Camera shutter button. Short press the Menu button again to exit the settings.